



Viewfinder Compatibility for Ikelite Housings

This chart provides the correct 45° Magnified Viewfinder option, Type 1, 2, 3, or 4 for most Ikelite Housings for DSLR and Mirrorless Interchangeable Lens (MIL) cameras.

The last column lists compatibility of the Straight Enhanced Magnifying Viewfinder. Up or down refers to the position of the viewfinder in relation to the housing. Some housings may have controls which cause interference with the viewfinder body. “Up” means the viewfinder may be positioned with the eyepiece rotated towards the top of the housing. “Down” means the viewfinder may be positioned with the eyepiece rotated towards the bottom of the housing.

We do not offer adapters for the use of Ikelite Magnified Viewfinders with housings produced by other manufacturer.

HELPFUL LINKS

[Straight vs 45 Degree Magnified Viewfinder for Underwater Shooting](#)

[Installing a Magnifying Viewfinder \[VIDEO\]](#)

Nikon Cameras

	Housing	45° Viewfinder	Straight Enhanced Viewfinder Position
Nikon D100	6810	Not confirmed	Not confirmed
Nikon D200	6812	Not confirmed	Not confirmed
Nikon D300	6812.3	Type 1 or 3	Not confirmed
Nikon D3000	6801.30	Not confirmed	Not confirmed
Nikon D300S	6812.31	Type 1 or 3	Not confirmed
Nikon D3100	6801.31	Not confirmed	Not confirmed
Nikon D3200	6801.32	Type 1 or 3	Not confirmed
Nikon D3300	6801.33	Type 1 or 3	Not confirmed
Nikon D3300, D3400	6801.34	Type 1 or 3	Up or down
Nikon D3500	6901.35	Type 1 or 3	Not confirmed
Nikon D40 Nikon D60	6804.1	Not confirmed	Not confirmed
Nikon D50	6805.1	Not confirmed	Not confirmed
Nikon D500	6812.5 71005 73005	Type 1 or 3	Up or down
Nikon D5000	6801.50	Type 1 or 3	Not confirmed
Nikon D5100	6801.51	Type 1 or 3	Not confirmed
Nikon D5200	6801.52	Type 1 or 3	Not confirmed
Nikon D5300	6801.53	Type 1 or 3	Not confirmed
Nikon D5500, D5600	6801.55	Type 1 or 3	Not confirmed
	6901.56	Type 1 or 3	Not confirmed
Nikon D600, D610	6812.6 6812.61	Type 2	Not confirmed

	Housing	45° Viewfinder	Straight Enhanced Viewfinder Position
Nikon D70	6807 6807.1	Type 2	Not confirmed
Nikon D700	6812.7	Type 1 or 3	Not confirmed
Nikon D7000	6801.70	Type 2	Not confirmed
Nikon D7100, D7200	6801.71 6801.72 71001	Type 2	Up or down
Nikon D750	6812.75 71007	Type 1 or 3	Up or down
Nikon D7500	71017	Type 2	Up or down
Nikon D780	6891.3	Type 3	Up or down
Nikon D80	6808.1	Not confirmed	Not confirmed
Nikon D800	6812.8 71011	Type 1 or 3	Up or down
Nikon D810	6812.81 71009	Type 1 or 3	Up or down
Nikon D850	71015	Type 1 or 3	Up or down
Nikon D90	6809.1	Type 2	Not confirmed
Nikon Z5	71067	Type 3	Up or down
Nikon Z50	71065	Type 3	Up or down
Nikon Z6, Z6 II, Z7, Z7 II	71063	Type 3	Up or down
Nikon Z6 III	71071	Type 4	Up or down
Nikon Z8	71069	Type 3	Up or down

Canon Cameras

Housing	45° Viewfinder	Straight Enhanced Viewfinder Position
----------------	-----------------------	--

	Housing	45° Viewfinder	Straight Enhanced Viewfinder Position
Canon 1000D Rebel XS	6872.10	Not confirmed	Not confirmed
Canon 100D Rebel SL1	6970.01 6970.03	Type 1 or 3	Up or down
Canon 200D Rebel SL2	6970.05 6970.06	Type 1 or 3	Up or down
Canon 250D Rebel SL3	6970.08 6970.09	Type 1 or 3	Up or down
Canon 10D	6871.10 6871.11	Type 1 or 3	Not confirmed
Canon 1100D Rebel T3	6872.11	Not recommended	Not confirmed
Canon 1200D Rebel T5	6872.12	Not recommended	Not confirmed
Canon 20D	6871.20	Type 1 or 3	Not confirmed
Canon 300D Rebel	6870 6870.1	Not confirmed	Not confirmed
Canon 30D	6871.30	Type 1 or 3	Not confirmed
Canon 350D Rebel XT	6871.35	Not confirmed	Not confirmed
Canon 400D Rebel XTi	6871.40	Not confirmed	Not confirmed
Canon 40D	6870.40	Type 1 or 3	Not confirmed
Canon 40D, 50D	6870.50	Type 2	Not confirmed
Canon 450D Rebel XSi	6871.45	Type 2 Limited rotation	Not confirmed
Canon 500D Rebel T1i	6871.50	Type 2 Limited rotation	Not confirmed
Canon 550D Rebel T2i	6871.55	Type 2	Not confirmed
Canon 5D	6871.05	Type 1 or 3	Not confirmed
Canon 5D Mark II	6871.02 71700	Type 1 or 3	Up only

	Housing	45° Viewfinder	Straight Enhanced Viewfinder Position
Canon 5D Mark III Canon 5DS, 5DS R	6871.03 6871.04	Type 2	Down only
Canon 5D Mark III, Mark IV Canon 5DS, 5DS R	6871.09 71702 73702	Type 2	Down only
Canon 600D Rebel T3i	6871.60	Type 2	Not confirmed
Canon 60D	6870.60	Type 2	Not confirmed
Canon 650D Rebel T4i	6871.65	Type 2	Not confirmed
Canon 6D	6871.06 71706	Type 2	Down only
Canon 6D Mark II	71720	Type 2	Down only
Canon 70D	6870.70	Type 2	Not confirmed
Canon 700D Rebel T5i	6871.65	Type 2	Not confirmed
Canon 750D Rebel T6i	71718	Type 2	Down only
Canon 7D	6871.07 71704	Type 2	Down only
Canon 7D Mark II	6871.08 71708	Type 2	Down only
Canon 80D	6870.80 71710	Type 2	Down only
Canon 850D Rebel T8i	71728	Type 2	Not confirmed
Canon 90D	71726	Type 2	Up or down
Canon M5	6973.05	Type 1 or 3	Up or down
Canon R	71760	Type 3	Up or down
Canon R5	71764	Type 3	Up or down
Canon R5 II	71765	Type 4	Up or down
Canon R6, R6 II	71766 71768	Type 3	Up or down

	Housing	45° Viewfinder	Straight Enhanced Viewfinder Position
Canon R7	69746	Type 4	
Canon R8	69748	Type 3	
Canon R10	69742	Type 4	
Canon RP	71762	Type 3	Up or down

Olympus, Panasonic, Sony Cameras

	Housing	45° Viewfinder	Straight Enhanced Viewfinder Position
Olympus E-1	6851	Not confirmed	Not confirmed
Olympus E-3	6851.3	Not confirmed	Not confirmed
Olympus E-30	6852.30	Not confirmed	Not confirmed
Olympus E-300	6853	Not confirmed	Not confirmed
Olympus E-330	6853.30	Not confirmed	Not confirmed
Olympus E-410 Olympus E-420	6854.10	Type 2	Not confirmed
Olympus E-500	6855	Not confirmed	Not confirmed
Olympus E-510 Olympus E-520	6856.20	Not confirmed	Not confirmed
Olympus OM-D E-M1 II	6952.02 69532	Type 1 or 3	Up or down
Olympus OM-D E-M1 III	6952.03	Type 1 or 3	Up or down
Olympus OM-D E-M5	6950.51	Type 2	Not confirmed
Olympus OM-D E-M5 II	6950.52	Type 1 or 3	Not confirmed

	Housing	45° Viewfinder	Straight Enhanced Viewfinder Position
Olympus OM-D E-M10	6950.10	Type 1 or 3	Not confirmed
Olympus OM-D E-M10 II	6950.12	Type 1 or 3	Up or down
Olympus OM-D E-M10 III	69531	Type 1 or 3	Up or down
OM System OM-1	69540	Type 3	Up or down
Panasonic G9	71307	Type 1 or 3	Up or down
Panasonic G85 Panasonic G80	6961.08	Type 1 or 3	Up or down
Panasonic GH3 Panasonic GH4	6860.03	Type 1 or 3	Not confirmed
Panasonic GH5, GH5 II	71305 71311	Type 1 or 3	Not compatible
Panasonic S5	71309	Type 1 or 3	Down only
Samsung NX1	6821.01	Type 2	Not confirmed
Sony A1	71476	Type 1 or 3	Up only
Sony A1 II	71483	Type 3	Up only
Sony A7, A7R, A7S	6843.71 71471	Type 1 or 3	Up only
Sony A7 II, A7R II, A7S II	6843.72 71472	Type 1 or 3	Up only
Sony A7 IV	71479	Type 3	Up or down
Sony A7C II, A7CR	71481	Type 2	Up or down
Sony A7R III, A9	71473	Type 1 or 3	Up only
Sony A7R IV	71474	Type 1 or 3	Up only
Sony A7R V	71479	Type 3	Up or down
Sony A7S III	71475 71476	Type 1 or 3	Up only
Sony A9 III	71482	Type 2	Up or down

	Housing	45° Viewfinder	Straight Enhanced Viewfinder Position
Sony A100	6841	Not confirmed	Not confirmed
Sony A200	6841.20	Not confirmed	Not confirmed
Sony A300 Sony A350	6841.35	Not confirmed	Not confirmed
Sony A230 Sony A330 Sony A380	6841.38	Not confirmed	Not confirmed
Sony A700	6841.7	Not confirmed	Not confirmed
Sony A33 Sony A55	6842.55	Type 1 or 3	Not confirmed
Sony A57 Sony A65	6842.65	Type 1 or 3	Not confirmed